


TIPS 'N' TRICKS

Detaching Printed Wristbands from Perforated Sheet

- 1 Detach from the non-adhesive tab edge.

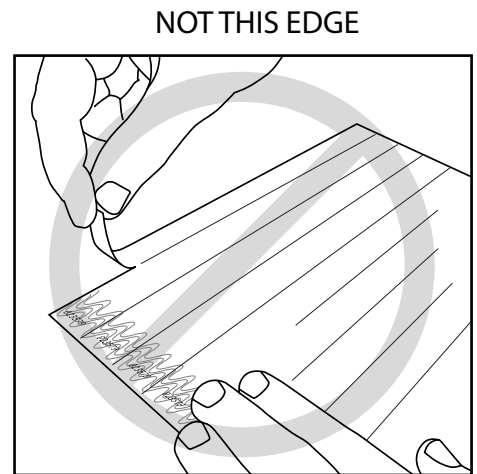

Do not detach from the edge with the adhesive tab

Detach from Sheet

